

owner's manual EN v1.0



We want to share a little bit about how JVR Industries, Inc. came into existence! JVR Industries was established in 1972 as a local sales and service provider of vacuum packaging equipment and supplies for the meat and poultry industry in Western New York. Our business's mission was and still is: "To build relationships with each of our customers by providing quality products and services at a reasonable cost." We believe that over the past 50 years, our success can be credited to our desire and ability to do just that.

# preface



Dear user, please read this manual carefully before operating the equipment, proper use is very important to prevent damage to the machine and personal injury. The potential dangers during operation and maintenance of the equipment are described through symbols in this manual. The following symbols are used in the text for your reference.



**Safety warning:** This symbol indicates a safety precaution to be taken to eliminate equipment malfunction and protect your personal safety.

**Notes:** This symbol represents the basic information of the equipment and methods or techniques used by the user.

The manufacturer has reviewed the contents of this manual and it can't be guaranteed that the contents are exactly the same as the actual situation due to human error. Reviews will be made periodically to make necessary corrections and update accordingly. If you have any concerns about the performance or operation of the equipment after referring to this manual, please contact your distributor prior to use.

We are not responsible for any equipment malfunction or accident caused by installation and use of failure to follow the contents of this manual. All the copyrights of this manual are owned by the company and are strictly prohibited from spreading, copying and other infringing actions. In case of any infringement, the company will retain the right to sue.



Precautions should be taken to prevent damage to equipment when removing packaging. Please check whether the delivered equipment matches what you ordered, if the delivery is incomplete or damaged, please notify the distributor immediately.

# contents



introduction	<u>−</u> −•1-2
components	

safety information	
safety precautions	

general information	4-5
seal wire replacement	
warranty	

troubleshooting 6
support video access6
notes6

## introduction



### **Quick Start Guide**

Step 1 Plug into a 110v outlet

**Step 2** Adjust sealing time according to the thickness of the bag.



NOTE: 2-4 seconds is an adequate time for most bags. The thicker the bag, the longer the seal time.

Step 3 Place your bag across the sealing area.



NOTE: No warm up time is required & heating is only applied while the light is on.

Step 4 Push down firmly on the handle to close the mouth of the impulse sealer. When the signal light goes off, please continue to press down for an additional 3 seconds for optimal results.

Step 5 Inspect seal to confirm times are correct. If times are not correct, please adjust accordingly before sealing your next bag.











general information



#### SEAL WIRE REPLACEMENT

- 1. Unplug the unit
- 2. Loosen screws for the Teflon tape hold-down strips.
- Remove the Teflon tape; replacement may be necessary if damaged.
- 4. The heat strip is held in place by two Philips screws, one on each end of the wire. First, remove the screw on the end closest to the dwell timer. NOTE: Depending on the model, you may have a black plastic cover that must be removed before completing this step.
- Next, remove the screw on the opposing end to release the seal wire.
- When installing the wire, start with the screw nearest the hinge. NOTE: Take caution not to over tighten the screw.
- Pull the wire across and install the opposing screw. Once again, take caution not to over tighten.
- Replace or reinstall the Teflon tape, if replacing, trimming of the tape may be necessary.
- Before tightening down on the tape hold down screws, make sure to center the tape, and flatten it out to prevent creases.
- 10. Plug the unit back in and test.

MODEL	VOLTS	Hz	WATTS	SEAL LENGTH
Pulse8	110	60	300	8″
Pulse 12	110	60	400	12″
Pulse 16	110	60	600	16″

#### **SPECIFICATIONS**



warranty



#### WARRANTY

JVR Industries warrants it's equipment to be free from defects in material and workmanship for a period of 1 year from the date of purchase. This warranty only applies to new equipment that has been purchased directly from IVR Industries or an authorized distributor. A claim under this warranty must be made within 1 year from the date of purchase of the equipment. Only the equipment's original purchaser may make a claim under this warranty. In the event of abuse or neglect JVR has the right to deny warranty. In the event that a warranty claim is denied, the purchaser will be contacted by a JVR representative and provided a detailed explanation as to the reasons why.

name: Andrew Eising

sianature

title: Vice President

Technical Support email: pulseseries@JVRinc.com

Warranty Related Claims: email: warranty@JVRinc.com



troubleshooting



### - SUPPORT VIDEO ACCESS

For instant access to our support playlist on YouTube, scan the corresponding QR code.



### NOTES

