




**Vac110**  
controls, 2nd Gen

# BASIC INSTRUCTIONS

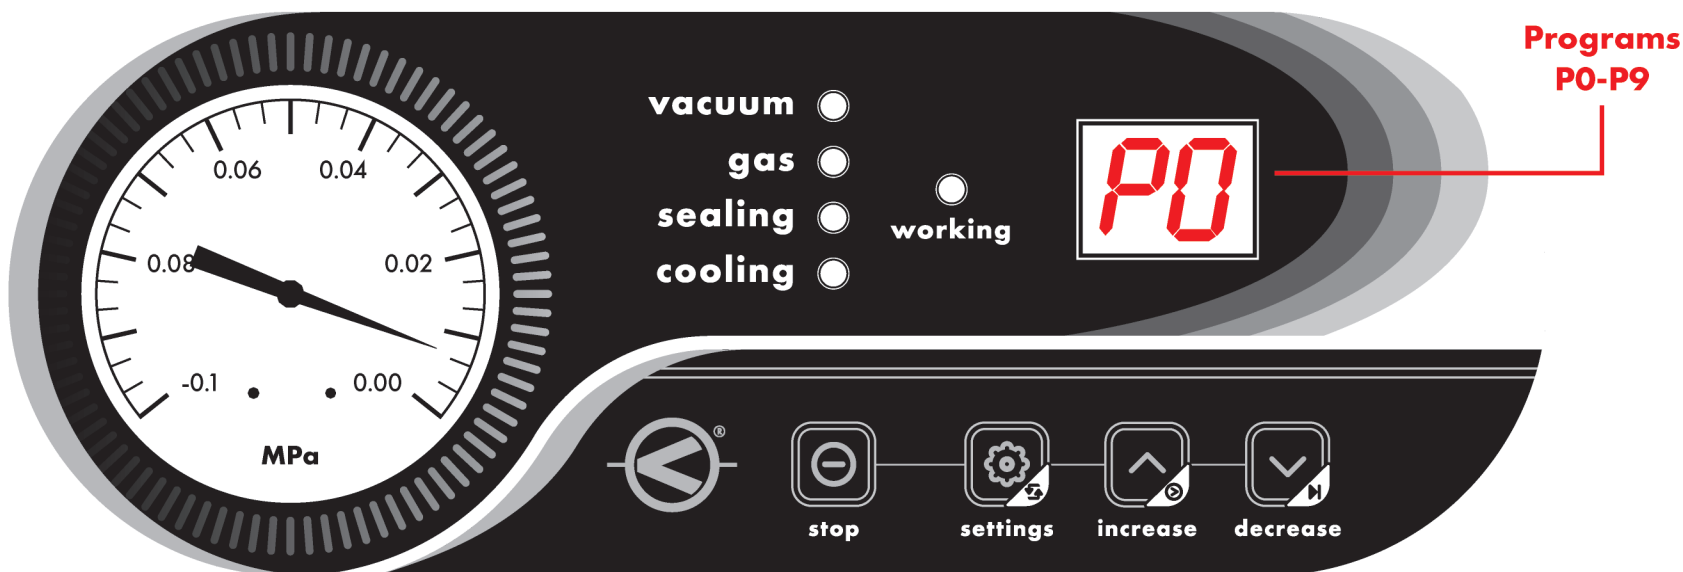

## BUTTON FUNCTIONALITY



The incorrect setting methods may affect the performance of the machine or the package integrity.



### Increase time or program number

**Press & Hold (3 Seconds) Function:** Manual Pump Mode for external accessories. *NOTE: If constant beep occurs, turn off your machine, turn on, & try again.*



### Decrease time or program number

**SKIP function during vacuum cycle** abruptly ends vacuum & skips to the seal cycle.



### Basic Stop Function



### Press & Release Function: Change Settings

**Press & Hold (3 seconds) Function:** Program number will blink, use increase & decrease to change program. Press settings to load program





### Disconnect switch (power on/off)

The disconnect switch can be found on the left panel.





## PROGRAM ADJUSTMENTS

## BASIC INSTRUCTIONS


Press & hold the **SETTINGS** button (  ) once to enter the programs menu. If at any time you would like to exit the programs, press the **SETTINGS** button (  ).

The first screen to appear will display your program number. Press increase/decrease to select a different program number. This machine is capable of storing 9 unique programs, P0-P9. Vacuum will need to be decreased for liquid items in order to prevent boil-over or the **SKIP** function can be used.


Upon selecting the program you wish to edit, press the **SETTINGS** button (  ) to exit out of the programs menu. Press the **SETTINGS** button (  ) one more time to enter the settings menu to illuminate vacuum cycle times.

### VACUUM, SEALING & COOLING


#### VACUUM TIME SETTING:

press increase/decrease buttons to set a time of 0-99S. NOTE: 20-40 seconds is recommended for most items. Press the **SETTINGS** button (  ) to save and enter into the next step.

#### SEALING TIME SETTING:

press increase/decrease buttons to set a time of 0-3.0S. NOTE: 1.5-1.9 seconds is recommended to properly seal most pouches. It is recommended that you start with a lower setting and increase until a satisfactory seal is achieved. Press the **SETTINGS** button (  ) to save and enter into the next step.

#### COOLING TIME SETTING:

press increase/decrease buttons to set a time of 2-9.9S. NOTE: 3 seconds is recommended for most items. This is the final setting, press the **SETTINGS** button (  ) to save and return to STANDBY.

#### GAS TIME SETTING: ONLY AVAILABLE ON GAS MODELS

press increase/decrease buttons to set a time of 0-9.9S. Press the **SETTINGS** button (  ) to save and enter into the next step.