



VACUUM PACKAGING MACHINE

MODEL 400

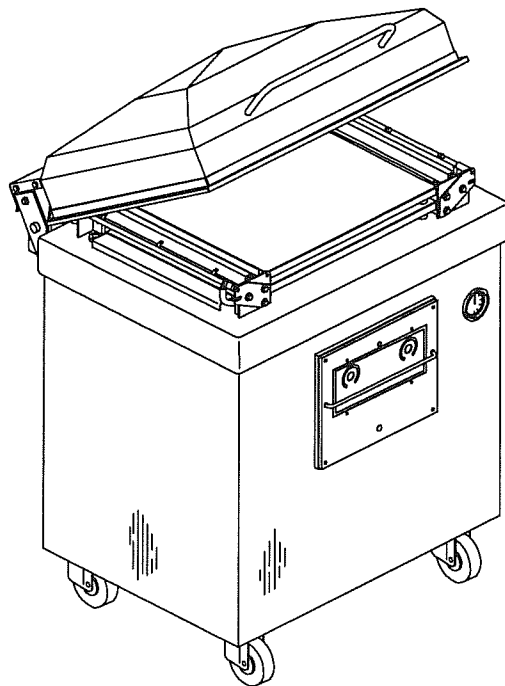

OWNERS MANUAL
(MANUEL D'UTILISATION)
(MANUAL DE UTILIZACIÓN)

Safe Operation Practices

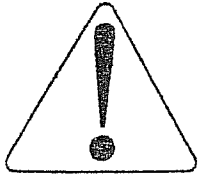

This symbol points out important safety instructions which, if not followed, could endanger the personal safety and/or property of yourself and others. Read and follow all instructions in this manual before attempting to operate your vacuum machine. Failure to comply with these instructions may result in personal injury.

General Operation

- Read, understand, and follow all instructions in the manual and on the machine before starting.
- Keep this manual in a safe place for further and regular reference and for ordering replacement parts.
- Only allow responsible individuals familiar with the instructions to operate the machine. Be sure to know controls and how to stop the machine quickly.
- Never put your hands near moving parts.
- Only allow qualified individuals for the maintenance of your machine.
- Remove all obstacles, which may interfere with the machine functions.
- Clear the work area such as electrical wires, buckets, knives etc.
- Be sure that everyone else is clear of your work area before operating the machine.
- Do not sit nor stand on the machine.
- Always turn off the machine after your work is done. Never leave a running machine unattended.
- Always disconnect and wait till the machine has cooled before attempting any maintenance.
- Do not wear loose fitting clothes or jewelry as they may get caught in moving parts of the machine.
- Always wear security shoes, to prevent injury caused by moving the machine or objects falling from the machine.
- Never exceed the time limit to seal, which is recommended by the manufacturer. This is to avoid any damage that may be caused to the sealing bars and to eliminate the risk of fire in the machine. Thus avoiding corporal burns.
- Never touch the sealing bars after they have been used, this will avoid corporal burns. Wait a few minutes to let the machine cool down before touching.
- Always make sure that the sealing bars are well installed in their guide blocks before starting a cycle.
- Never incline the machine more than 30 degrees, it may tip over and hurt someone seriously.
- Work only in daylight or good artificial light.

Do not operate the machine while under the influence of alcohol or drugs!

Service

- Use proper containers when draining the oil. Do not use food or beverage containers that may mislead someone into drinking from them. Properly dispose of the containers, or store in a safe place immediately following the draining of the oil.
- Prior to disposal, determine the proper method to dispose of waste from your local office of Environmental Protection Agency. Recycling centers are established to properly dispose of materials in an environmentally safe fashion.

Do not pour oil or other fluids into the ground, down a drain or into a body of water.

Warning-Your responsibility:

This machine should only be operated by personal who can read, understand and respect warnings and instructions regarding this machine in the owners manual.

VACUUM PACKAGING MACHINE

MODEL 400

- I OPERATION INSTRUCTIONS
- II MECHANICAL
 - A- Front view general assembly drawing
 - B- Rear view general assembly drawing
 - C- Seal bar assembly drawings
- III ELECTRICAL
 - A- Electrical drawing low voltage

OPERATION INSTRUCTIONS

TABLE OF CONTENTS

- 1. Setting up the machine
- 2. Electrical connection
- 3. Operation
 - 3.1 Working principles
 - 3.2 Setting of controls.
 - 3.3 Daily cleaning
- 4. Trouble shooting
 - 4.1 Failure during a packaging cycle
 - 4.2 Insufficient vacuum
 - 4.2.1 Leakage in the bag
 - 4.2.2 No leakage in the bag
 - 4.2.3 Insufficient vacuum in the chamber
 - 4.3 Faulty seal
 - 4.3.1 Insufficient seal
 - 4.3.2 No seal
 - 4.3.3 Permanent sealing current
 - 4.3.4 Seal does not stick
 - 4.4 Fault in the valves
- 5. Regular maintenance

VACUUM PACKAGING MACHINES

1. SETTING UP THE MACHINE:

Before choosing the site for the machine, please consider that you will also need room for packaged and non-packaged products apart from the space needed for the machine itself.

Keep in mind that the machine must not be set up upon uneven ground. Especially with mobile models, the weight of the pump might then cause warping of the machine. Then the lid will not fit correctly.

Before starting to work, check the oil view glass on the pump, if there is a sufficient quantity of oil in the pump. Never use oil other than recommended by the producer. Never exceed maximum quantity of oil indicated, when adding or changing oil. Verify weekly.

Due to the oil viscosity, the machine is hard to start when temperatures are very low. Therefore the pump should be put in a room with an air temperature of at least 50°F (+10°C). On the other hand, there must be free access of air to the pump to allow for cooling so that operation temperature of 160°F (70°C) is not exceeded.

2. ELECTRICAL CONNECTION:

Electrical connections must be made by qualified personnel. This person must make sure that the electrical entries corresponds to the proper voltage and amperage of the machine.

All vacuum machines are supplied with an electrical schematic drawing.

An important step in connecting the machine is to make sure that the pump turns in its correct rotation.

Warning: The pump should not rotate more than 3 to 4 seconds in the wrong rotation or it may cause serious damage. The proper rotation is indicated by an arrow on the pump motor.


3. OPERATION:

3.1 Working principles:

A vacuum packaging cycle is made of 3 stages. First the vacuum is made, the air is completely taken out of the chamber and from bag containing the product. (See figure 1). Then it is possible to inject neutral gas from the nozzles, if the product is delicate. Finally, a mechanism pushes the sealing bar to the rubber support to seal the bag.


To obtain nice packages, the products and the bags have to be of proportional sizes. The bag's opening should never exceed 2" (50 cm) past the seal bars. The product should be centered in height in relation to the seal bar by adjusting the spacers provided.

To obtain a good seal, make sure that no residue of fat is left between the bag's inner sides where sealing is done.

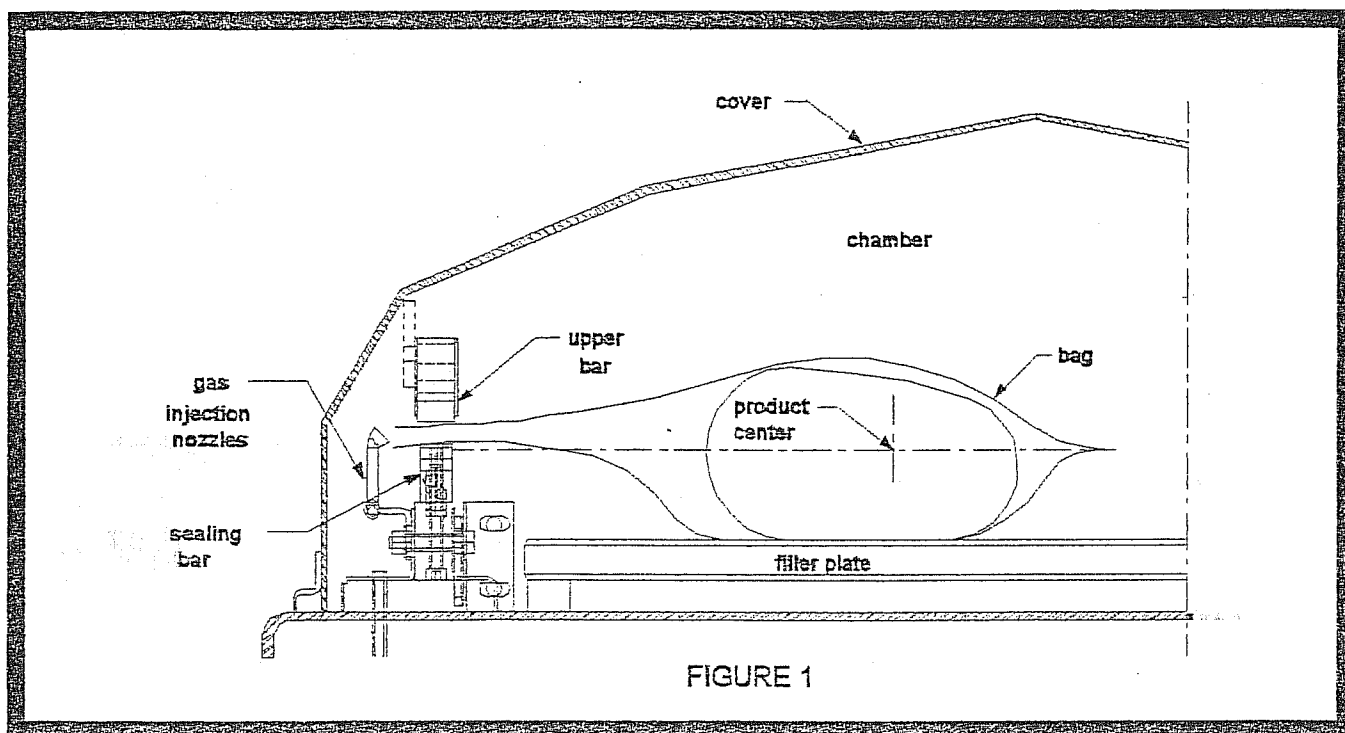

3.2 Setting of MC-05 controls p.c. board:

Control panel:

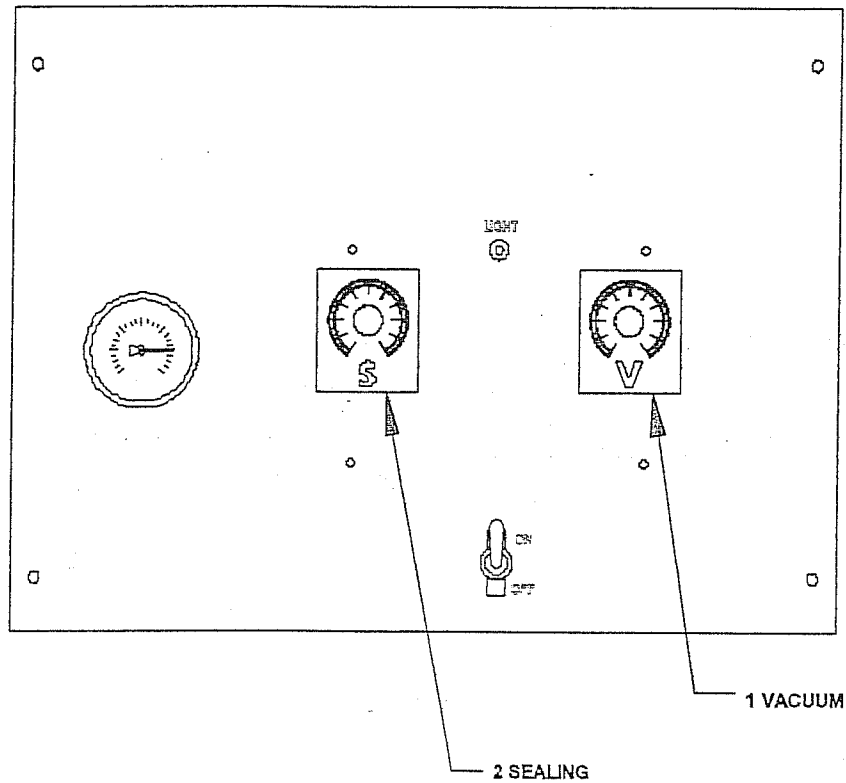

To turn on: Lift on/off switch

To turn off: Lower on/off switch

How to program a complete cycle:

To select the vacuum time:

1. Turn the potentiometer and set the desired timing.

The vacuum setting time can be set between 3 and 100 seconds for a range between step 1 and step 10

To select the sealing time:

2. Turn the potentiometer and set the desired timing.

The sealing time can be set between 1/2 to 10± seconds for a range between step 1 and step 10

BASIC PROGRAM TO MODIFY ACCORDING TO THE PRODUCTS

MACHINE	"V"	"S"
VAC 300 & 400	Step 2,5	Step 2,5

Warning: There is no security limit time protection for sealing. Do not increase the sealing time too much to prevent damaging the teflon.

WARNING: ALL ELECTRICAL WORK DESCRIBED IN THIS BROCHURE SHOULD BE DONE BY A QUALIFIED AND AUTHORIZED TECHNICIAN.

3.3 Daily cleaning:

For hygienic cleanliness, it is imperative to clean chamber and spacers daily. Also clean the lid rubber to assure tight seat of the lid.

4. TROUBLE SHOOTING:

4.1 Failure during a packaging cycle:

The lid is closed and cycle fails to start or stop immediately after having started:
Micro switch is actuated too late, re-set the micro switch.
Fault in supply of electricity to the timing control (power on light does not go on):
Check secondary voltage of transformer (approx. 24 Volt AC);
Check fuse;
If none of these apply, change PC board

4.2 Insufficient vacuum:

4.2.1 Leakage in the bag:

Leakage in lateral or bottom seal, complain to supplier of bags or film.

4.2.2 No leakage in the bag:

Bag is too large, therefore the surplus of air remains visible (there is surplus of air in 0.4% of the bag volume in each bag). Use bags of suitable size.

Evacuation time is too short:

4.2.2 Cont.

Pressure bar is jammed and closes opening of bag during evacuation.

Most frequently, insufficient vacuum in bags is due to leakage in bag and not due to any fault of the machine.

Pin-hole leak for which there is no obvious explanation is due to faulty bag material.

Pin-hole leak caused by sharp edge of the product (bone, etc.). Use bone-guard or thicker film.

Tear in bag by careless handling (sharp edge on filling table, damage made by retailer or customer).

4.2.3 Insufficient vacuum in chamber:

If troubles described under 4.2.1 and 4.2.2 do not apply, there is something wrong with the evacuation. To find the leakage quickly, check for leaks with a precision vacuumeter, going back step by step from the chamber to the pump.

At the chamber at maximum time of evacuation. If more than 6 torr, proceed directly to the pump, if more than 3 torr: have pump service by pump supplier. If pressure at pump is good, reconnect hoses to pump and measure again.

Verify at vacuum hose connections and valve connections.

When proceeding this way, starting from pump, loss of pressure per step must not exceed 0.5 to 1 torr.

Warning: Verify connections of measuring equipment before verifying machine.

Most frequent points of leakage: lid gasket, damaged vacuum hose or loose hose clamps.

4.3 Faulty seal:

4.3.1 Insufficient seal:

Damaged teflon or silicone rubber.

Sealing pressure too low, bellows leaking or pressure bar jammed.

Leakers in seal: heating wire mechanically damaged (knicked) or silicone rubber uneven.

4.3.2 No seal:

Sealing wire burnt.

Faulty contact in sealing circuit.

Sealing transformer burnt through.

Relay does not work.

4.3.3 Permanent sealing current:

Relay is jammed check sealing transformer for damage through overload.

4.3.4 Seal does not stick:

Insufficient layer of polyethylene (inferior quality of bags).

Seal area extremely contaminated by fat or meat juice. Use filling aid.

Sealing temperature is too low (when using very thick films).

4.4 Fault in the valve:

Vacuum or air valve does not open.

Check whether there is voltage on the magnetic valves during their period of operation. If there is no voltage a wire is broken or the PC board is damaged.

Lid does not open at the end of the cycle; air enters, but there is still 20 - 40% vacuum in chamber. Vacuum valve does not close.

5. Regular maintenance:

Routine controls to be made at regular intervals:

Check teflon for wear.

Check silicone rubber for burnt spots and smooth even position.

Check pressure bar for jamming.

Check lid sealing for damage and hardened spots.

Check switch-point of micro switch, adjust if necessary.


Check evacuation hose for damage (contraction of diameter, or abrasions).

Check vacuum connections for tightness.


Check oil in pump (oil level in view glass; add if necessary. Regular change of oil - necessity indicated by change of color).

Check vacuum in chamber with precision vacuumeter.


Check function of cycle with various settings.

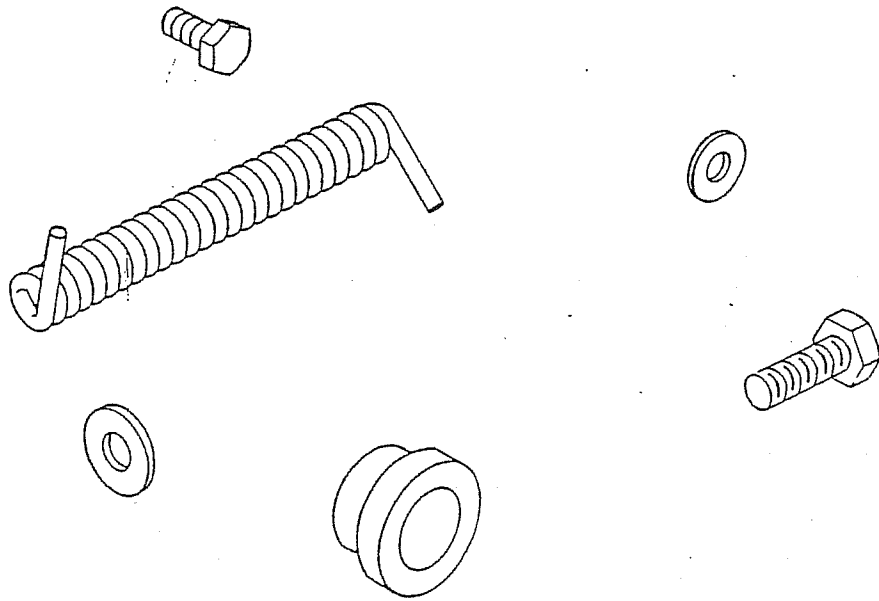

MECHANICAL DRAWING

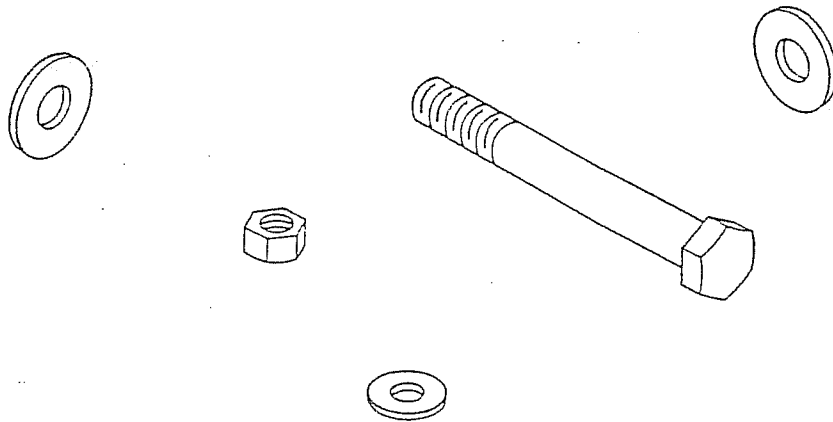

ITEM	PART #	DESCRIPTION	QT.
1	005-0638	STRUCTURE ASSEMBLY	1
2	005-0531	TABLE ASSEMBLY	1
3	005-0540	COVER ASSEMBLY	1
4	005-0564	SEAL BAR ASSEMBLY W/ SUPPORT	2
5	005-0565	SEAL BAR ASSY W/ SUPPORT (BAG CUT OPT.)	2
6	005-0532	BELLOWS ASSEMBLY	2
7	051-0780	FLAT WASHER 3/8" S/S	2
8	051-0620	HEX. NUT 3/8"-16 NC. S/S	2
9	051-0581	HEX. NUT 1/4"-20 NC. NYLON LOCK S/S	8
10	002-0326	LEFT/SEAL BAR GUIDE BLOCK	2
11	002-0327	RIGHT/SEAL BAR GUIDE BLOCK	2
12	051-0250	HEX. BOLT 1/4"-20 NC. X 1 1/2" S/S	8
13	051-0740	FLAT WASHER 1/4" S/S	16
14	005-0534	FILLER PLATE ASSEMBLY	2
15	051-0212	BOLT 1/4"-20 x 1" PAN PHIL S/S	4

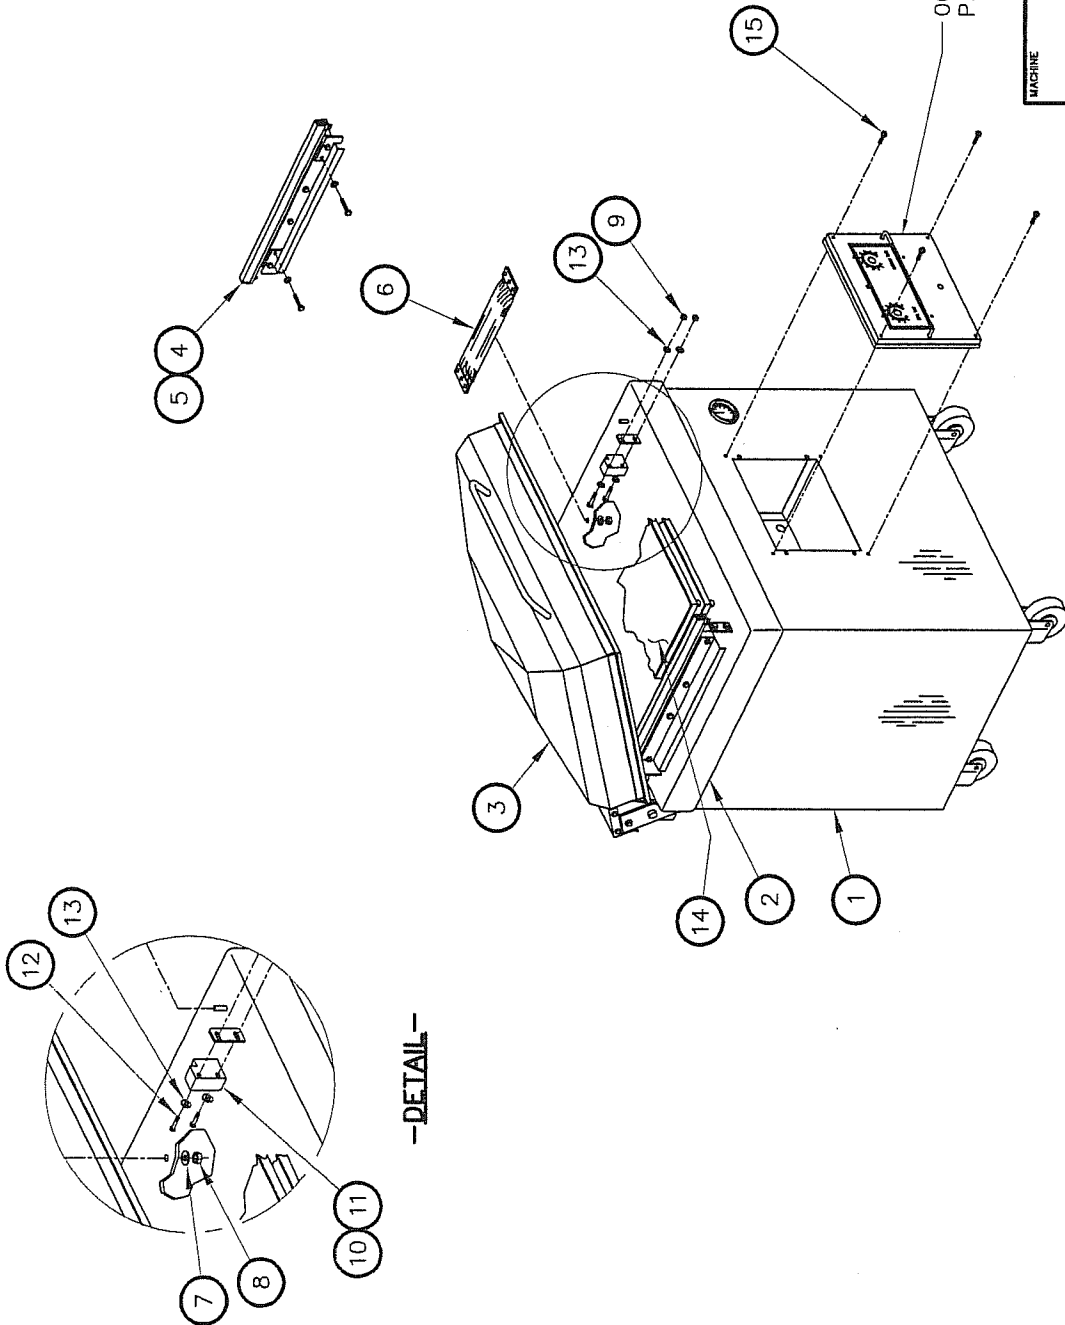

MACHINE: 400
 PART: MACHINE ASSEMBLY FRONT VIEW
 ITEM: _____ DATE: 99-05-03
 ENG: _____ APP: _____
 DVS. LAROUCHE
 SCALE: _____ DT: 1
 SIPROMAC
 ST-GERMAIN DE GRANTHAM
 QUEBEC CANADA
 N.T.S.
 METRIC TOLERANCE: 0 ± .5, .5 ± .005, .005 ± .005, .005 ± .005, .005 ± .005
 INCH TOLERANCE: .005 ± .015, .015 ± .005, .005 ± .005, .005 ± .005, .005 ± .005
 DATE: 04-10-25
 RETIRER P.C. BOARD ASSEMBLY DU PART LIST
 MODIFICATION

J.G.	DATE	INT.
	04-10-25	

1005-0640

ITEM	#PART	DESCRIPTION	QT.
1	005-0637	MACHINE ASSEMBLY FRONT VIEW	1
2	005-0531	TABLE ASSEMBLY	1
3	005-0540	COVER ASSEMBLY	1
4	051-0185	SCREW 1/4"-20 NC. X 1/2" PAN PHILL. S/S	4
5	051-0740	FLAT WASHER 1/4" S/S	14
6	004-0172	SPRING COVER PRE-ASSEMBLY	1
7	051-0620	HEX. NUT 3/8"-16 NC. S/S	12
8	001-1335	COVER STOPPER	1
9	051-0783	FLAT WASHER 3/8" (THICK) S/S	25
10	051-0360	HEX. BOLT 3/8"-16 NC. X 1" S/S	8
11	004-0129	COVER AXIS PRE-ASSEMBLY	1
12	051-0630	HEX. NUT 1/2"-13 NC. S/S	2
13	008-0460	COVER SPRING	1
14	005-0346	SPRING TENSION SUPPORT PRE-ASSY	1
15	004-0276	CENTRAL COVER AXIS SUPPORT	1
16	001-1540	CENTRAL COVER AXIS SUPPORT FIXATION	1
17	051-0178	SET SCREW 1/4"-20 NC. X 5/16" S/S	1
18	005-0348	MICRO-SWITCH COLLAR ASSY	1
19	004-0274	LEFT COVER AXIS SUPPORT	1
20	004-0275	RIGHT COVER AXIS SUPPORT	1
21	051-0424	HEX. BOLT 3/8"-16 NC. 3 1/2" S/S	4
22	051-0360	HEX. BOLT 3/8"-16 NC. 1 1/4" S/S	2
23	038-0350	SLIT COORUG LOOM 2" ID X 370 MM	1
24	057-0330	CABLE TIES 14" LONG BLACK	3
25	130-4PHB	4" PL. CASTER SWIVEL W/ BRAKE	2
26	130-4PHO	4" PL. CASTER SWIVEL W/O BRAKE	2
27	052-0520	BOLT 5/16"-18 NC. X 3/4" ZINC	16
28	051-0760	FLAT WASHER 5/16"-18 NC. ZINC	32
29	052-3110	HEX. NUT 5/16"-18 NC. ZINC	16
30	051-0970	BOLT MB x 15 S/S	4
31	051-0760	WASHER 5/16" FLAT S/S	4
32	004A1651	COVER HOLD DOWN PRE-ASSY	1
33	026-0610	LIMIT SWITCH LONG ROLLER	1
34	051-0540	NUT #4-40 HEX S/S	2
35	051-0715	WASHER #4 LOCK SS	2
36	051-0094	SCREW 4-40 X 1 1/2" FLAT SLOT SS	2

MACHINE: **400**

PART: **MACHINE ASSEMBLY REAR VIEW**

ITEM: _____

DATE: 99-05-03

DATE: 65-01-18

NO. 005-0640

ST-GERMAIN DE GRANTHAM QUEBEC CANADA

SIPROMAC

TOLEANCES: USURANCE ± 0.1, METRIC ± 0.004, TOLERANCE ± 0.5, SUBBASE ± 0.3, N.T.S.


DATE: 99-05-03

DATE: 65-01-18

NO. 005-0640

ST-GERMAIN DE GRANTHAM QUEBEC CANADA


SIPROMAC

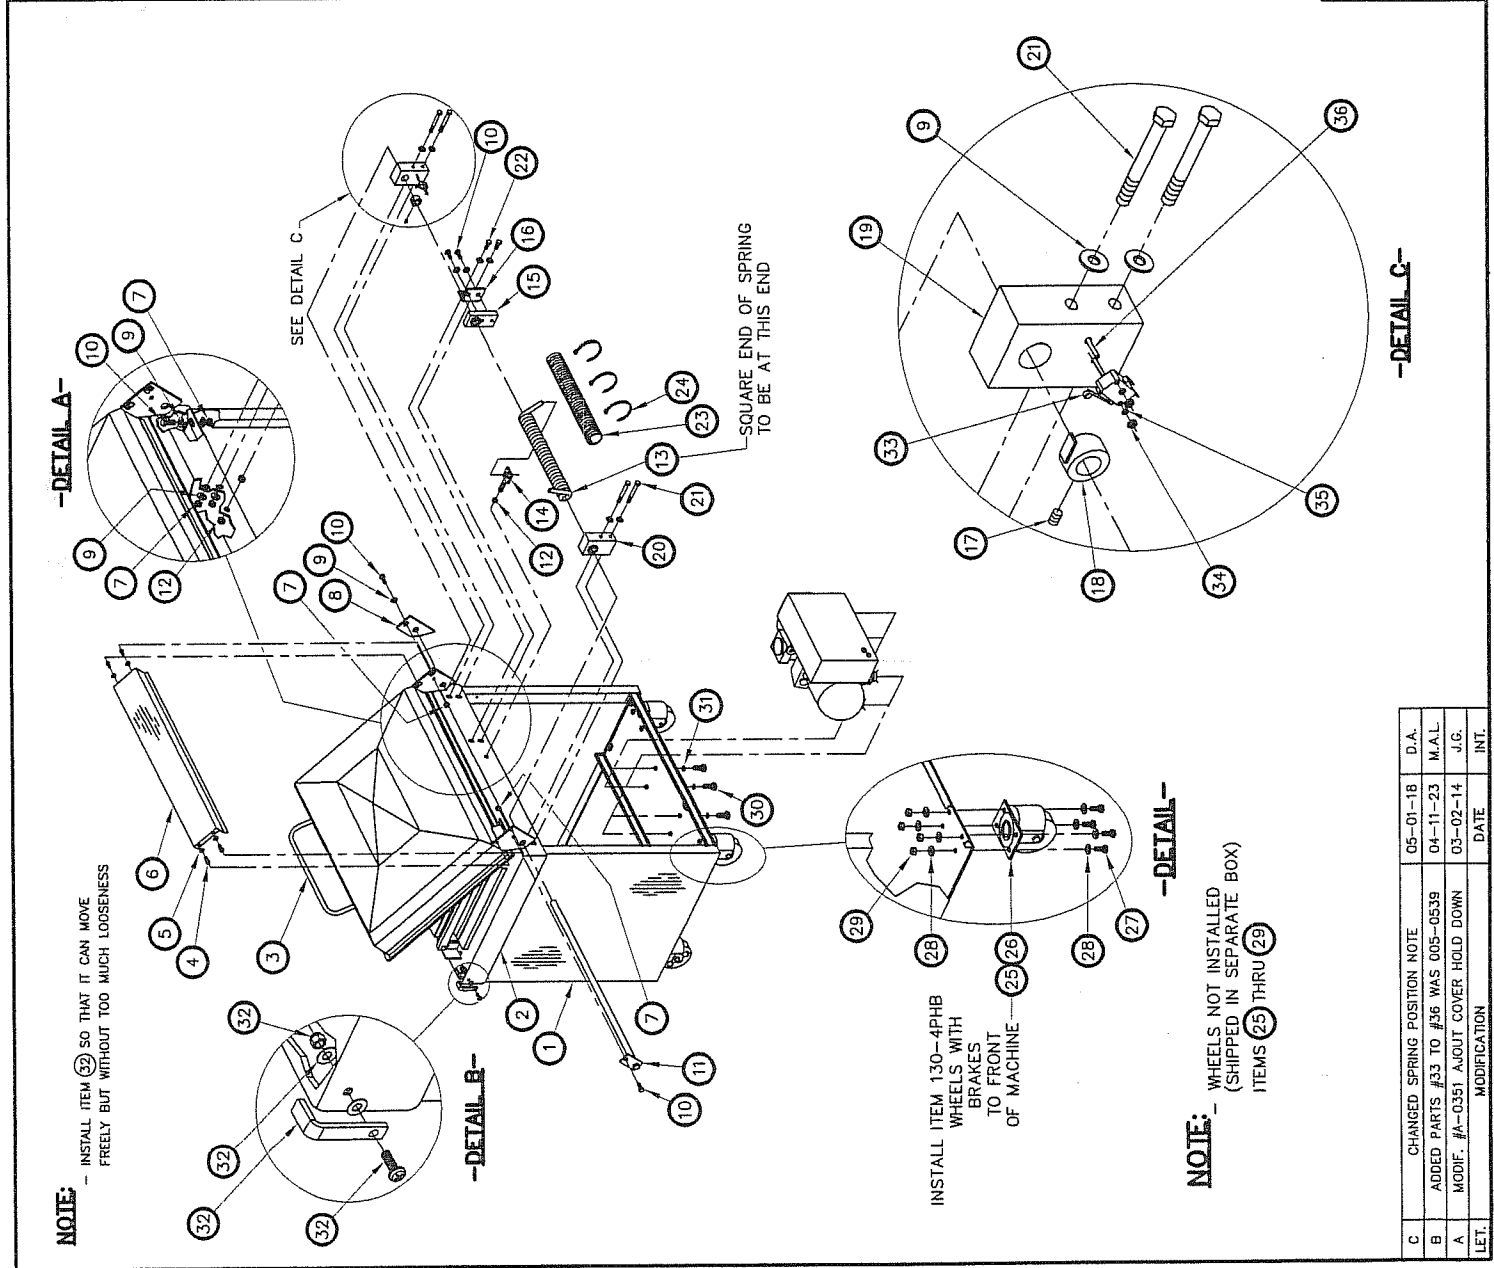

LET.	MODIFICATION	DATE	D.A.	INT.
C	CHANGED SPRING POSITION NOTE	05-01-18	D.A.	
B	ADDED PARTS #33 TO #36 WAS 005-0539	04-11-23	M.A.L.	
A	MODIF. #A-0351 ABOUT COVER HOLD DOWN	03-02-14	J.G.	

005A0834

ITEM	PART #	DESCRIPTION	QTY
1	004-0506	FRONT P.C. BOARD SUPPORT PRE-ASSY	1
2	127-0156	SIPROMAC STICKER	1
3	036-0190	GROMMET 3/8"IDx7/8"OD RUBBER	2
4	036-0100	GROMMET 3/16"IDx1/2"OD RUBBER	1
5	051-0111	SCREW 8-32 x 3/4" RND PHIL S/S	4
6	058-0130	CPVC SPACER #8 x 3/8" OD x 3/8"	4
7	051-0550	NUT #8-32 SS	8
8	179-0014	RUBBER 1/4" x 3/8" x 1/16" ("U" SHAPED) x 3.9 PIEDS	1
9	008-0506	CONTROL PROTECTOR	1
10	051-0580	NUT 1/4"-20unc. S/S	4
11	051-0740	WASHER 1/4" FLAT S/S	2
12	057-0450	PLUG 11/16"BLACK NYLON	1

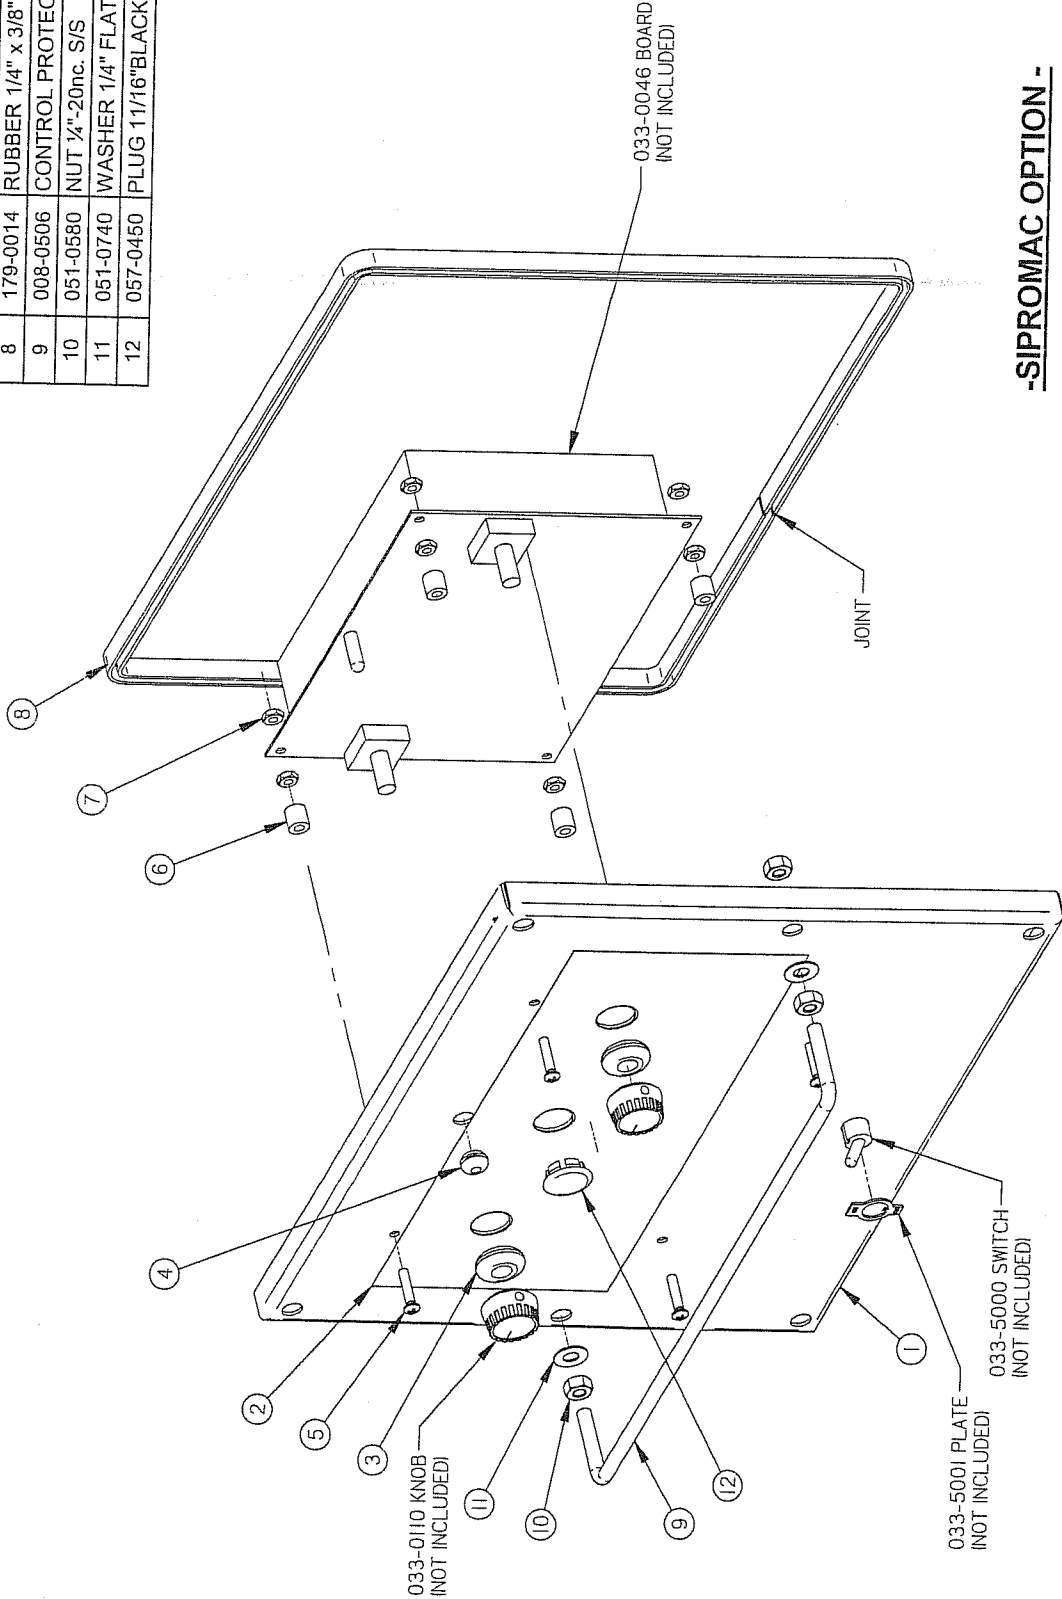


-SIPROMAC OPTION -

MACHINE	400	DEPT.	M	QTY.	1
PART	FRONT P.C. BOARD SUPPORT ASSY	DATE	03-05-27	NO.	005A0834
ITEM		DATE	03-05-27	NO.	005A0834
APP. BY	J.P.	DATE	03-05-27	NO.	005A0834
CNC		N.T.S.			
STIPROMAC		ST-GERMAIN DE GRANTHAM			
		QUEBEC CANADA			

A	AJOUTER 057-0450	04-10-25	J.G.
TEL.	MODIFICATION	DATE	INT.

ITEM	PART #	DESCRIPTION	QTY.
1	004-0507	STRUCTURE PRE-ASS'Y	1
2	005-0642	ELECTRICAL BOX PRE-ASS'Y	1
3	001-2156	PUMP SUPPORT	1
4	051-0180	BOLT 1/4"-20 x 1/2"	10
5	051-0740	FLAT WASHER 1/4"	16
6	051-0581	NYLON LOCK 1/4"-20 S/S	6
7	001-1869	HOLDING WASHER (FOR VAC. GAUGE)	1
8	114-0260	VACUUM GAGE W/ SUPPORT	1
9	101-0038	STR. 1/4" FNPT x 3/8" T.P. COMP. BR.	1

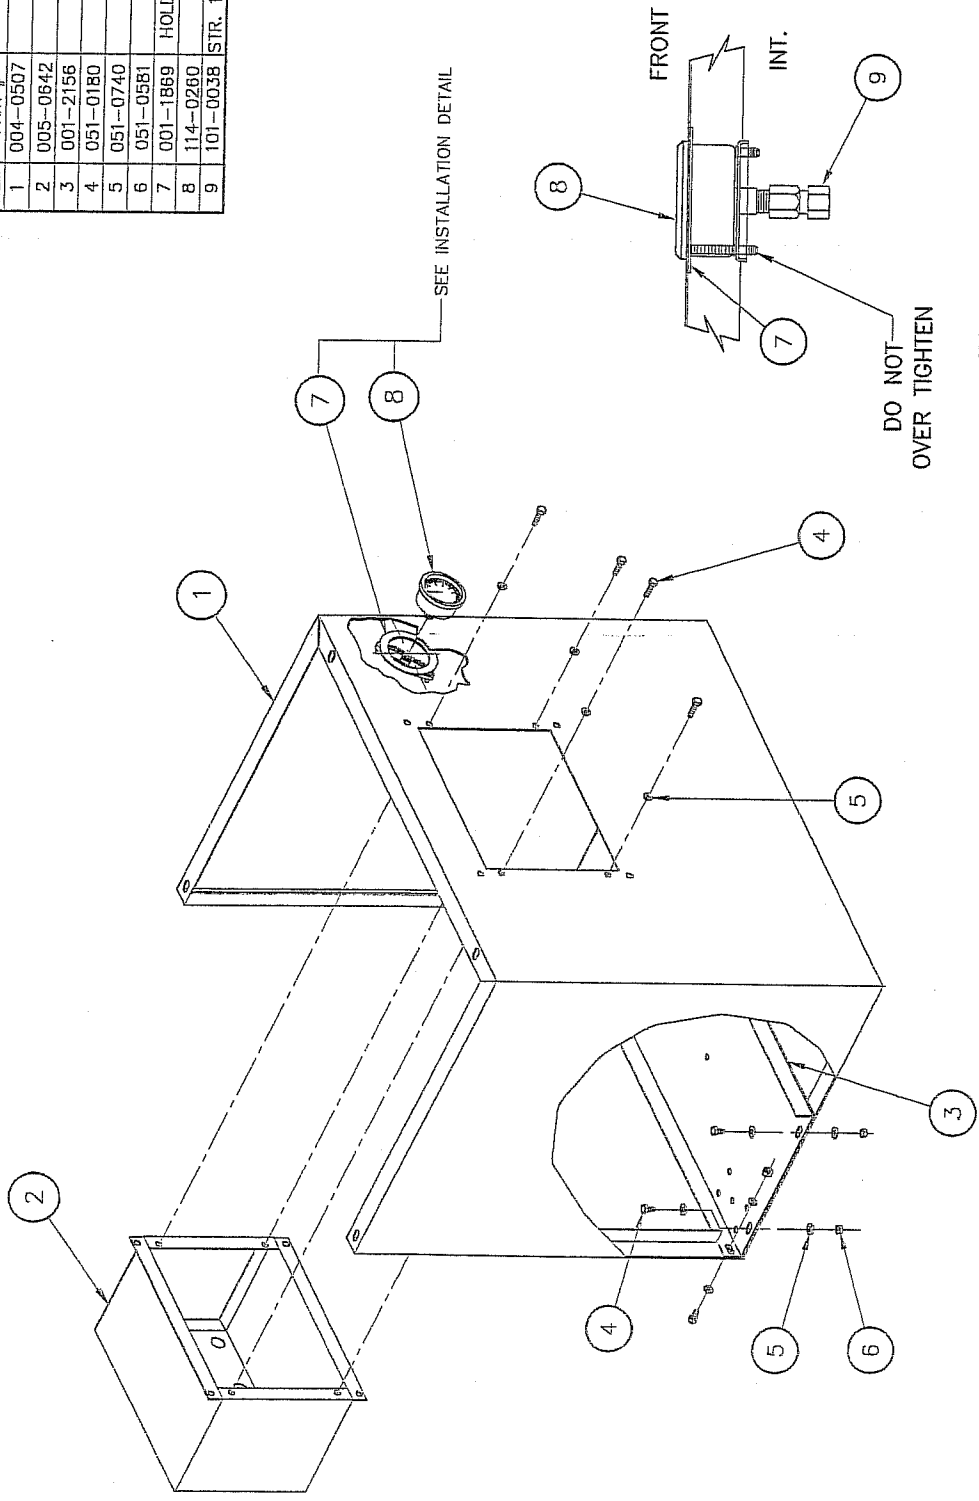


-INSTALLATION DETAIL-

MACHINE	400	SIPROMAC
PART	STRUCTURE ASS'Y	SIPROMAC ST-GERMAIN DE GRANTHAM, QUEBEC CANADA
ITEM:	DATE 99-05-05	SCALE
MAT:	BY: LAROUCHÉ	QTY. 1
	APP:	ID. 005-0638

LET.	MODIFICATION	DATE	INT.
------	--------------	------	------

ITEM	PART #	DESCRIPTION	QT.
1	004-0352	SEAL BAR PRE-ASSEMBLY	2
2	002-0512	SEAL BAR SUPPORT (TABLE)	2
3	051-0256	CAP HEX. SKT. BOLT 1/4"-20 NC X 1 3/4" S/S	6
4	001-1960	EXTERIOR BELLOWS COVER	2
5	001-1856	INTERIOR BELLOWS COVER	2
6	001-1858	SEAL BAR GUIDE	4
7	051-0250	HEX. BOLT 1/4"-20 NC. X 1 1/2" S/S	8
8	051-0230	HEX. BOLT 1/4"-20 NC. X 1 1/4" S/S	4
9	051-0581	HEX. NUT 1/4"-20 NC. NYLON LOCK S/S	12
10	051-0740	FLAT WASHER 1/4" S/S	16
11	038-0230	WRING DUCT W/ ADHESIVE BACKING (0.35" X 0.5" X 300) PVC	2

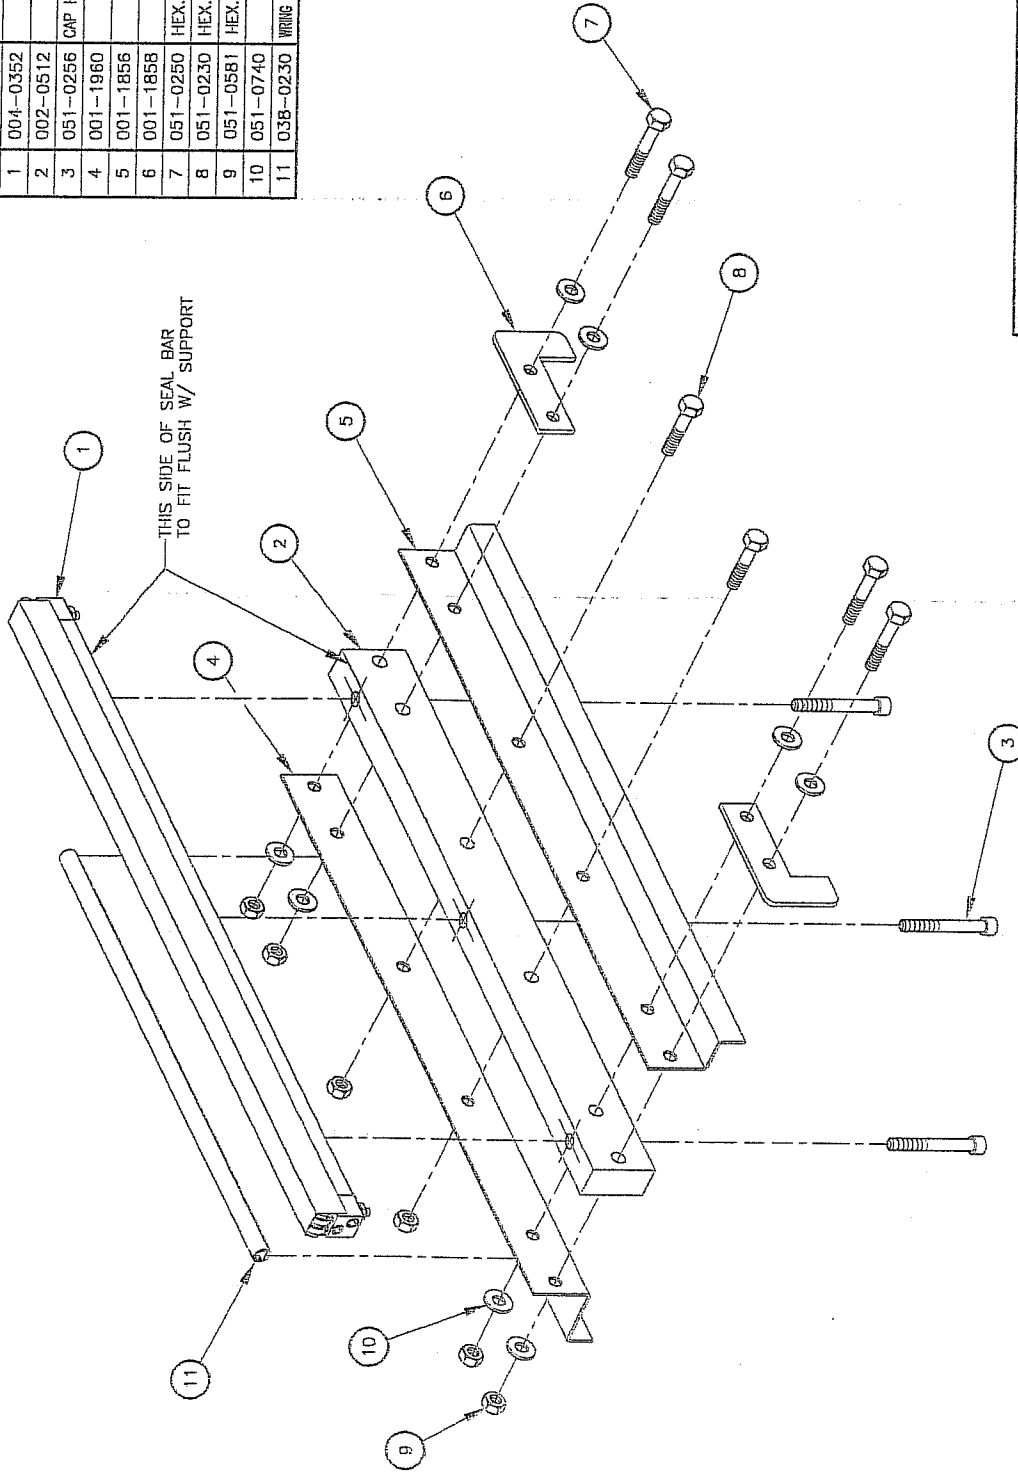

MACHINE: 400 & 450A
 PART: SEAL BAR ASSEMBLY W/ SUPPORT
 ITEM: _____
 MAT: _____

STIPROMAC
 ST-GERMAIN DE GRANTHAM
 QUEBEC CANADA

SCALE: _____ QT. 2
 NO. 005-0564


DATE: 97-10-20
 DATE: 97-10-20
 DATE: _____

DATE: 97-10-20
 DATE: 97-10-20
 DATE: _____

B	ADDED 400	99-05-06	S.L.
A	REDRAWN/ WAS 004-0353/ MODIF. NO. A-0226	97-10-20	A.P.
LET.	MODIFICATION	DATE	INT.

004-0352

ITEM	#PART	DESCRIPTION	QT.
1	002-0481	SEAL BAR (TABLE)	1
2	002-0031	CONNECTOR	2
3	039-0200	SEALING ELEM. STD TWIN (2x626mm EA.)	4.31
4	052-0395	SCREW 1/4"-20 NC. X 5/16" SET HEX SKT OVAL PT	4
5	052-0250	SCREW #8-32 X 1 1/2" RND SLOT BRASS	2
6	051-0550	NUT #8-32 S/S	4
7	176-0200	TEFLON TAPE 5S ADHESIVE X 2" X (496mm EA.)	0.063
8	027-0400	CONNECTOR ADAPTOR 1/4" X #10 STUD	2

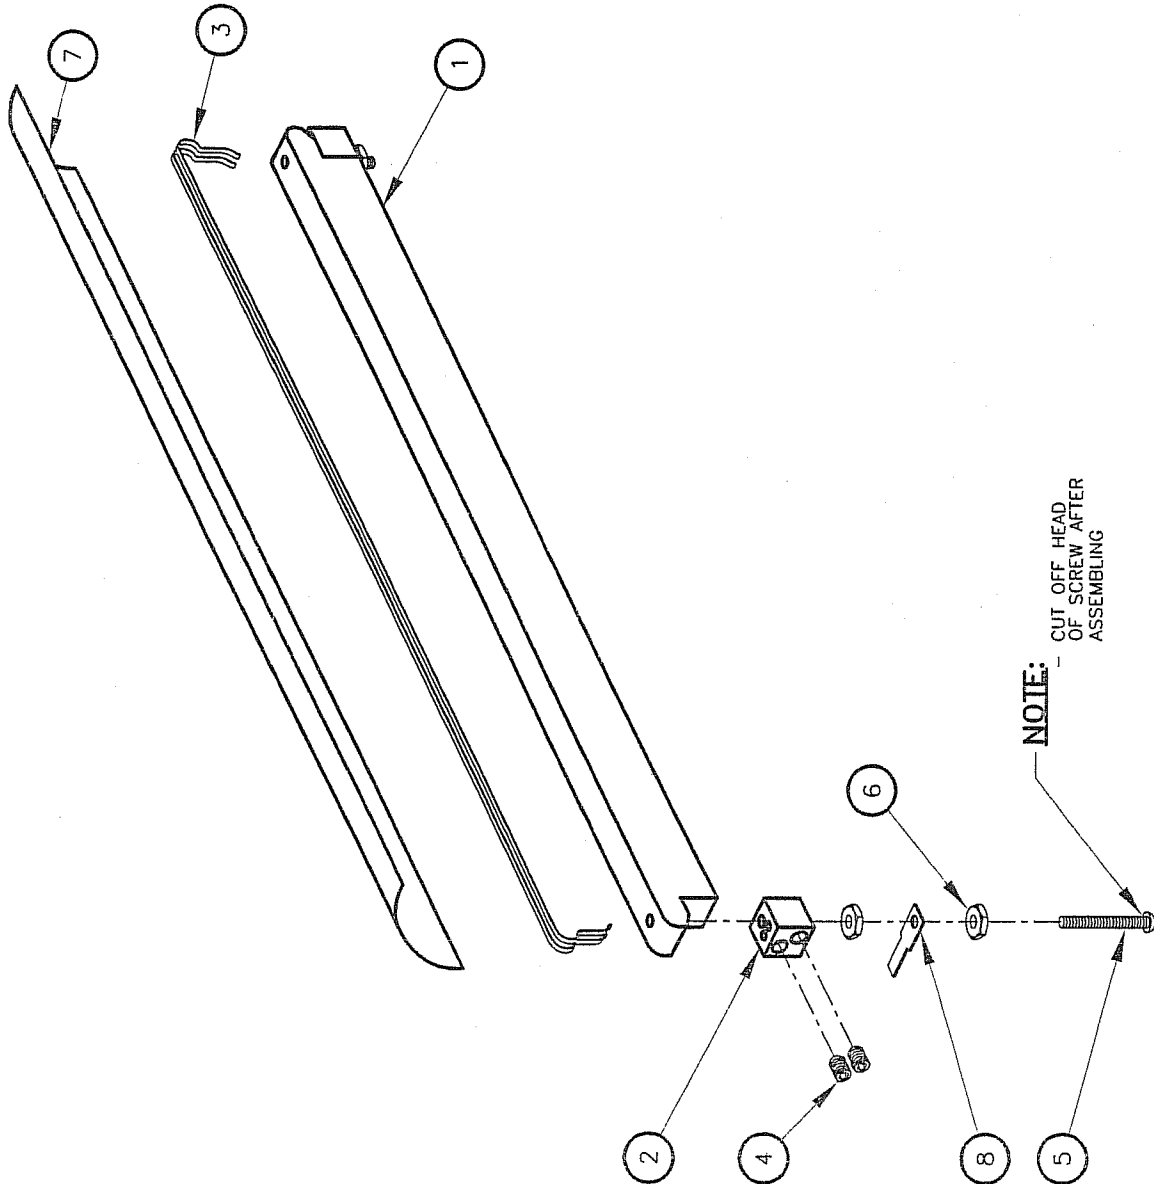


NOTE:
CUT OFF HEAD OF SCREW AFTER ASSEMBLING

LET.	MODIFICATION	DATE	INT.
D	MODIFICATION #A-0398 (CONNECTEUR)	04-04-19	J.G.
C	ADDED 400	99-05-06	S.L.
B	REDRAWN	98-02-10	A.P.

MACHINE	400 & 450A		SIPROMAC	
PART	SEAL BAR PRE-ASSEMBLY		ST-GERMAIN DE GRANTHAM QUEBEC CANADA	
ITEM:	CNC:	DATE	98-02-10	NO.
MAT:	BWG	A. P.	DATE	004-0352
	APP.			M
				2

ITEM	PART #	DESCRIPTION	QTY.
1	004-0355	BAG CUT SEAL BAR PRE-ASSEMBLY	2
2	002-0512	SEAL BAR SUPPORT (TABLE)	2
3	051-0256	CAP HEX. BOLT 1/4"-20 NC X 1 3/4" S/S	6
4	001-1960	EXTERIOR BELLOWS COVER	2
5	001-1856	INTERIOR BELLOWS COVER	2
6	001-1858	SEAL BAR GUIDE	4
7	051-0230	HEX. BOLT 1/4"-20 NC. X 1 1/2" S/S	8
8	051-0230	HEX. BOLT 1/4"-20 NC. X 1 1/4" S/S	4
9	051-0581	HEX. NUT 1/4"-20 NC. NYLON LOCK S/S	12
10	051-0740	FLAT WASHER 1/4" S/S	16
11	038-0230	WIRING DUCT W/ ADHESIVE BACKING (0.35" X 0.5" X 300) PVC	2

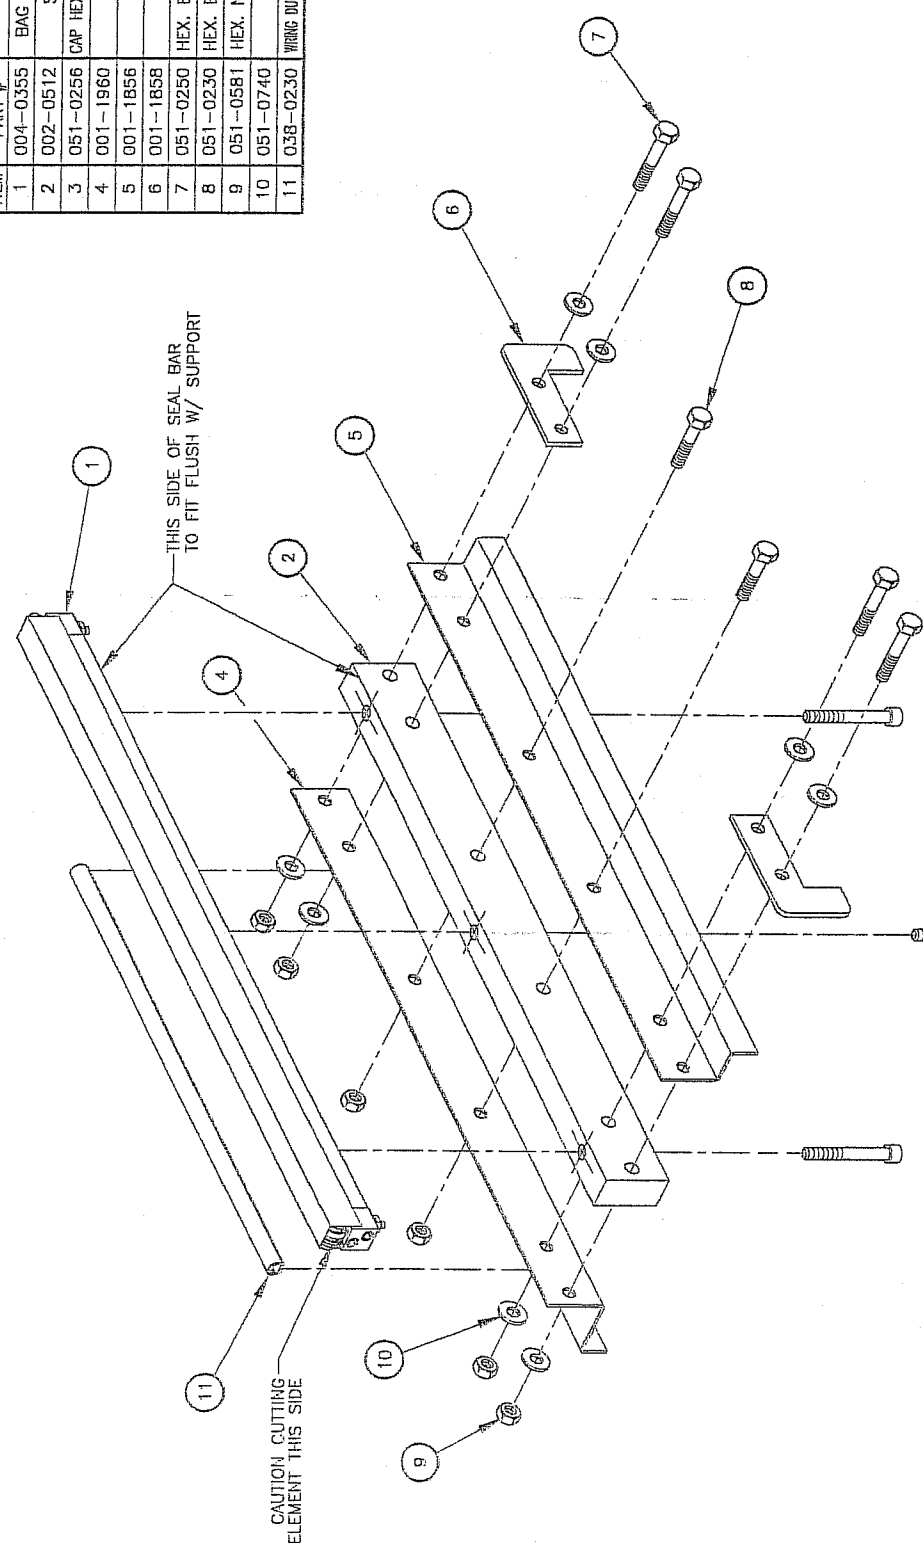


---BAG CUT OPTION---

MACHINE	400 & 450A	BY: A. PROVENCER	DATE	97-10-20
PART	SEAL BAR ASSEMBLY W/ SUPPORT	APP.		
ITEM				
MAR.				
METRIC TOLERANCE DI ± .05 HO ± .005 HOLE ± .005 ANGLE ± 1° N.T.S.		SCALE: 1:1 QTY: 2		
SIPROMAC ST-GERMAIN DE GRANTHAM QUEBEC CANADA		NO. 005-0565		

A. ADDED 400	99-05-06	S.L.
LET.	DATE	INT.
MODIFICATION		




1004A0351

ITEM	PART #	DESCRIPTION	QT.
1	002A048D	UPPER SEAL BAR SUPPORT	1
2	008-0450	UPPER SEAL BAR RUBBER	1


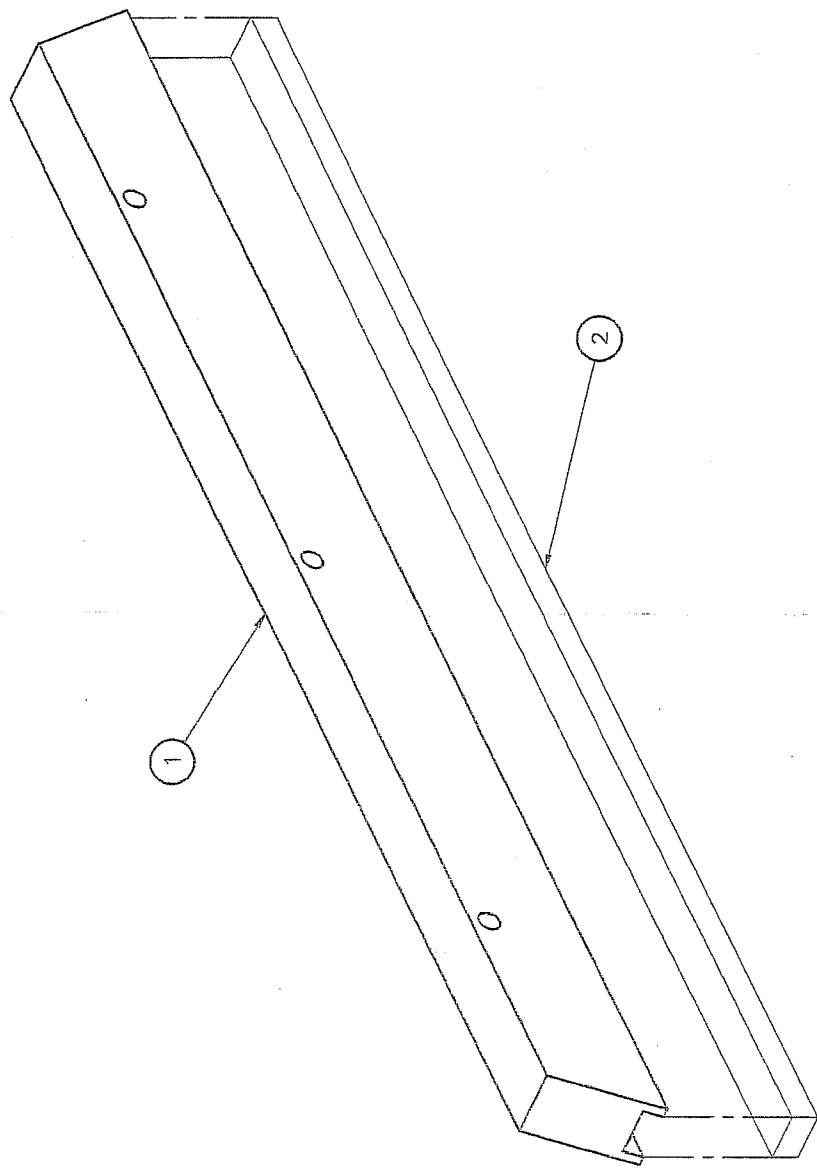


MACHINE	400 & 450A	IND. TOLERANCE	± 0.015"	SIPROMAC	DT.	2
PART	UPPER SEAL BAR PRE-ASSY	ANG. TOL.	± 0.005"	ST-GERMAIN DE GRANBY	NO.	004A0351
ITEM:		ANGLE ± 1°	± 0.005"	QUEBEC CANADA	SCALE	
DATE:						
BY:						
APP.						

C	REDRAWN	MODIFICATION	98-08-02	S.L.
LET.			DATE	INT.

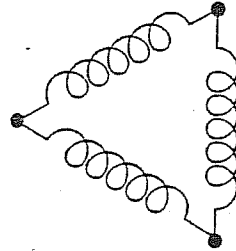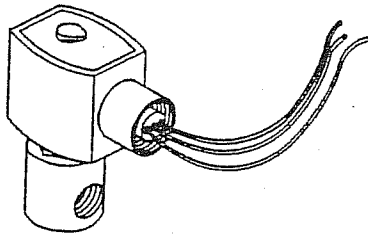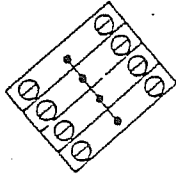

ELECTRICAL DRAWING

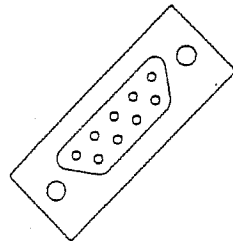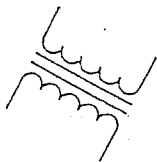

MATÉRIALS.

MC-05 PC BOARD

MC-05 120V. # 033-0046

MC-05 240V. # 033-0047

VALVE


V1 : 120V. G176 # 106-0064

V1 : 240V. G176 # 106-0066

V2 : 120V. G94 # 106-0062

V2 : 240V. G94 # 106-0063

MC-05

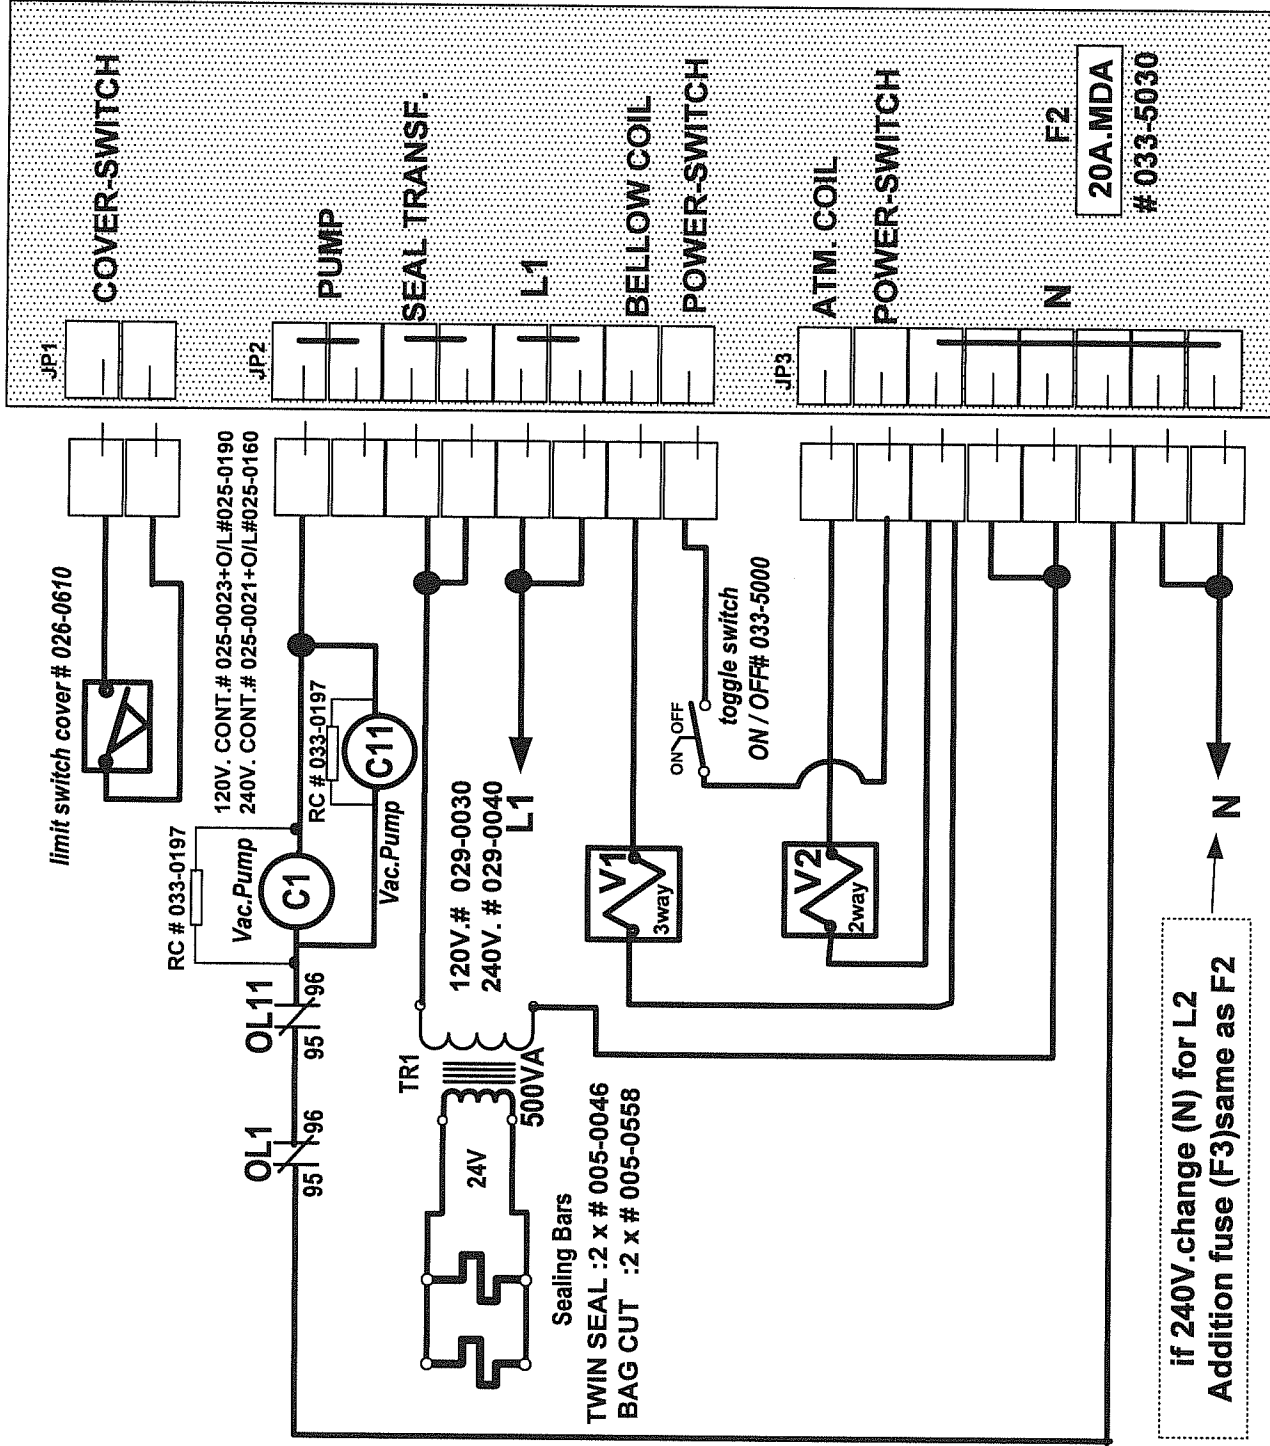

if 240V.change (N) for L2
Addition fuse (F3) same as F2

category	VACUUM PACK	model	400	vol	125-220V1Ph/60Hz-120-240/3Ph/50Hz		
system	1 work place	circuit	power	year	month	day	Block
usual fonctions	with MC05	2 pumps KB20 (125V)		06	03	15	
options	or	1 pump KB40 (240V/3ph)		concept	draw	app	DL
				PP	PP	DL	

SIPROMAC
St-Germain de Grantham
QUEBEC, CANADA

MATÉRIALS.

MC-06 PC BOARD


MC-06 240V. # 033-0048

VALVE

V1 : 240V. G176 # 106-0066


V2 : 240V. G94 # 106-0063

V3 : 240V. G22 # 106-0061

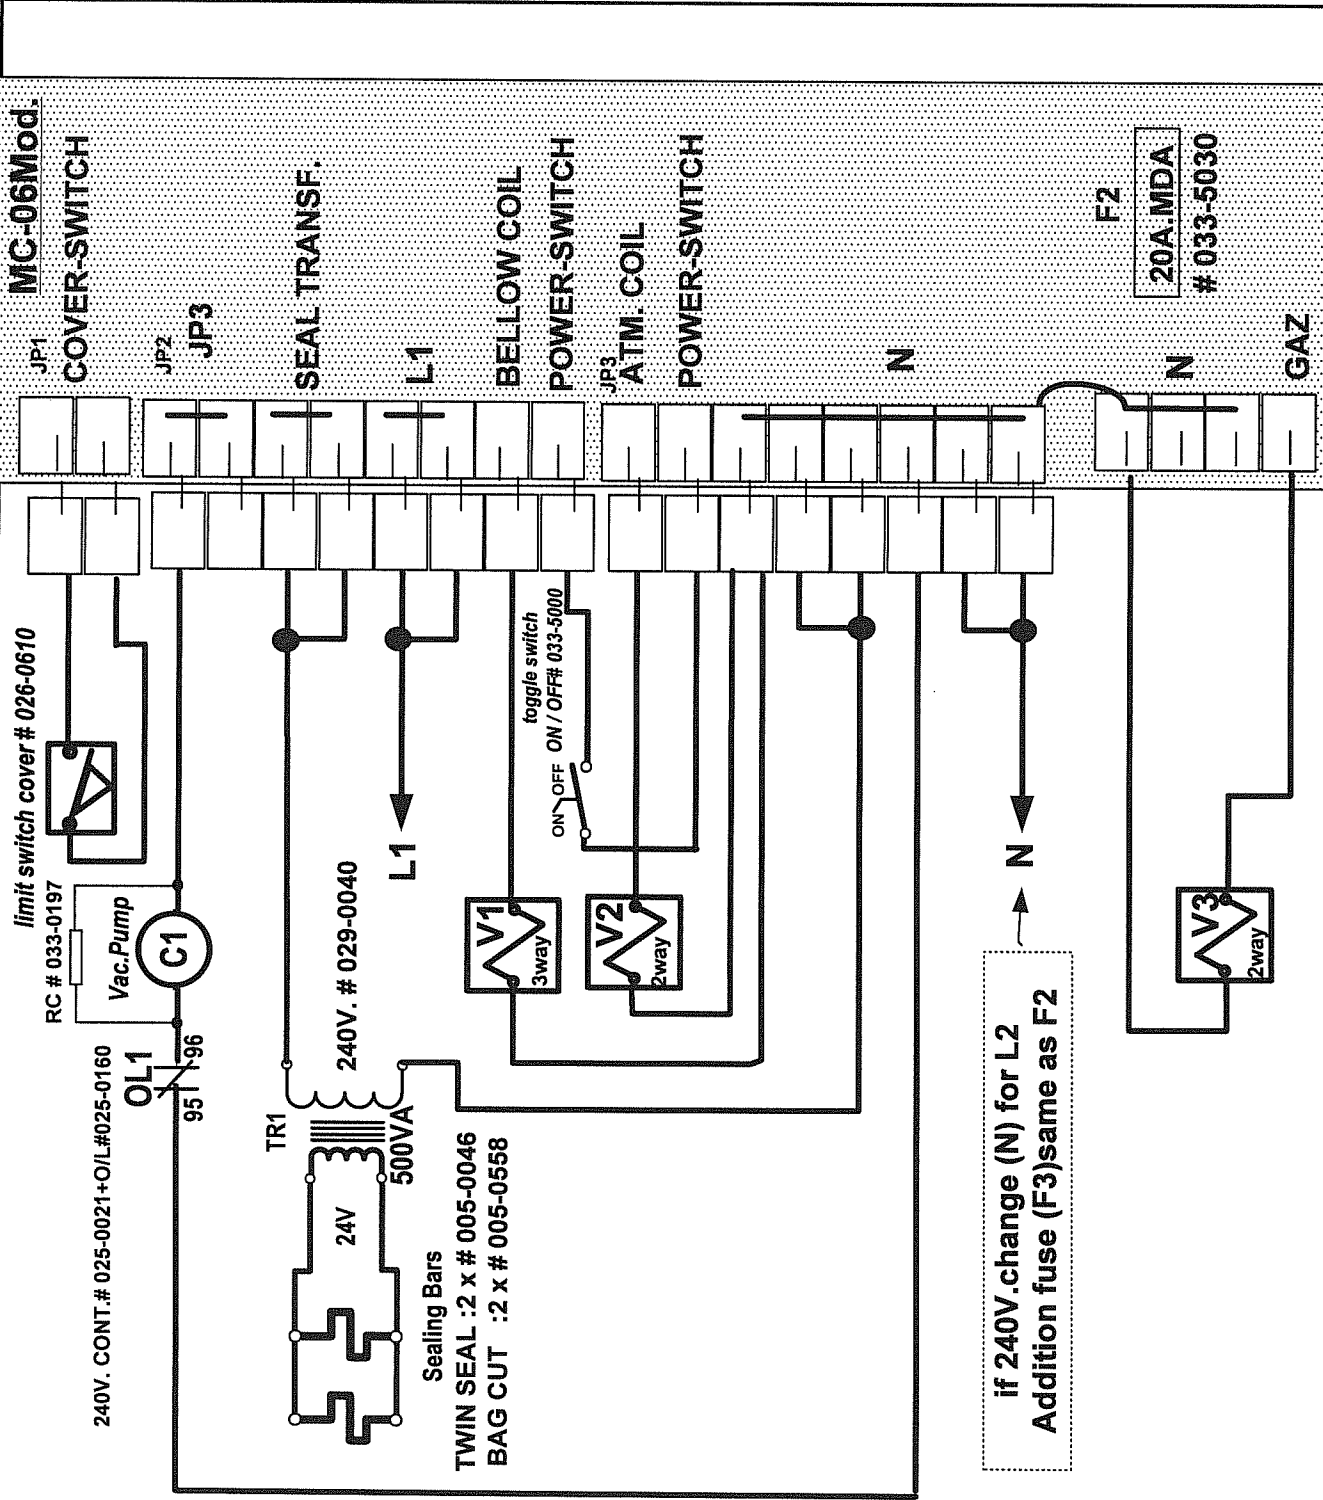

if 240V.change (N) for L2
Addition fuse (F3) same as F2

category	VACUUM PACK	model	400	volt	240V1Ph/60Hz-240/3Ph/50Hz
system	1 work place	power		concept	04 06 10
usual functions	with MC06 1 or 2 pumps KB20 (240V/1ph)	draw	RL	app	DL
options	OR 1 pump KB40 (240V/3ph)				
				block	006-0537
				PAGE	3 de 4
				SIPROMAC	
				St-Germain de Grantham QUEBEC, CANADA	

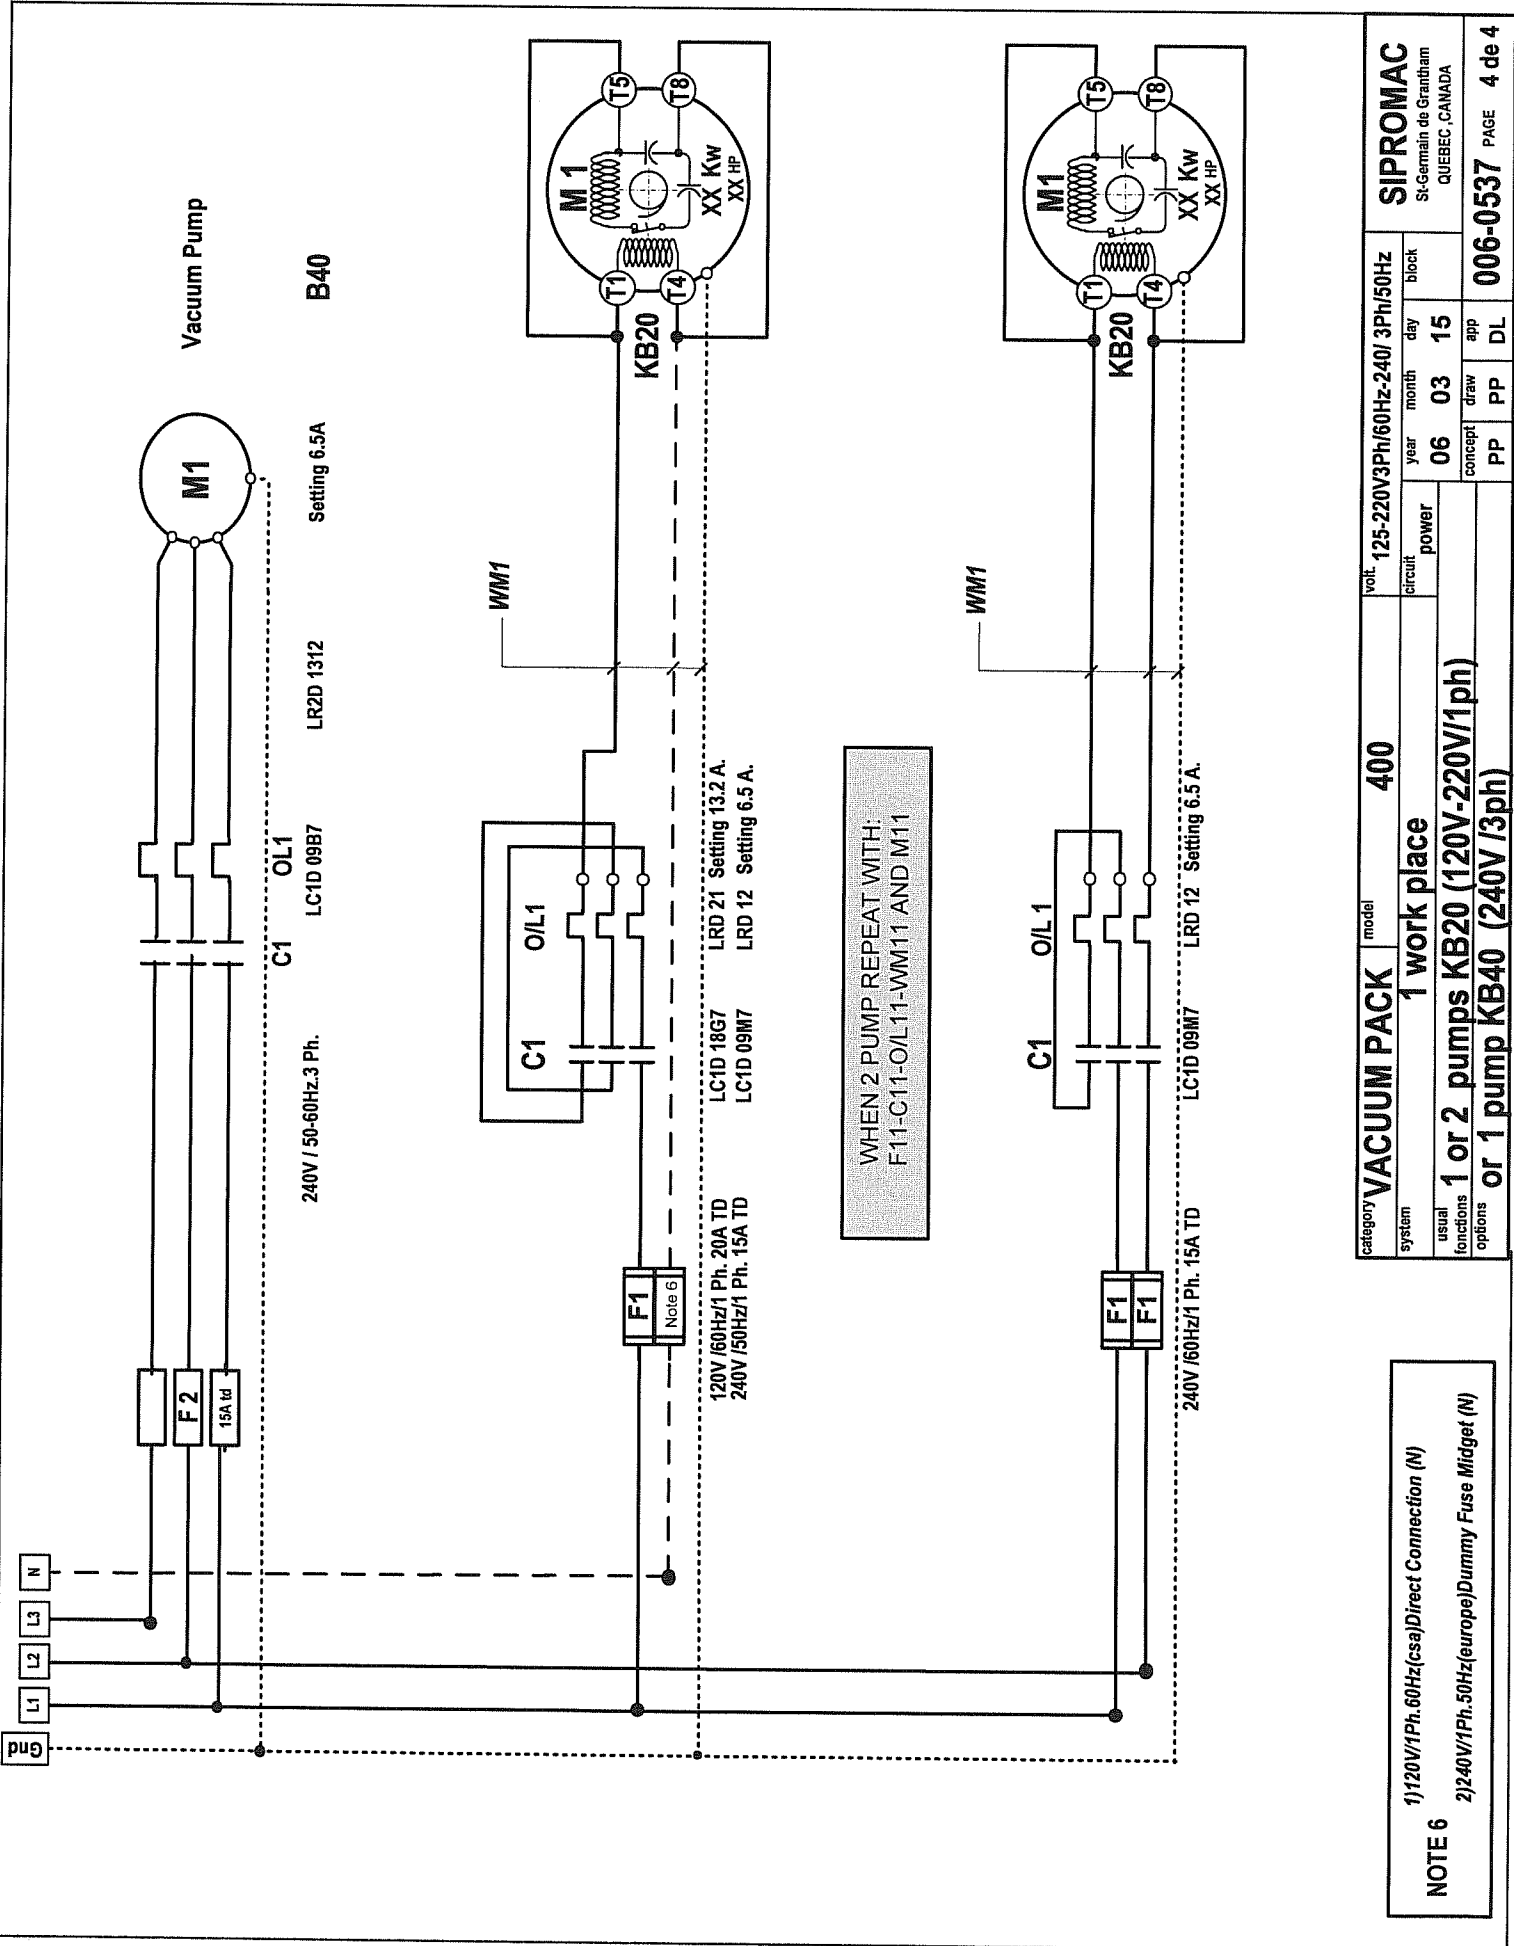

category		VACUUM PACK		model	400		volt.	125-220V/3Ph/60Hz-240/3Ph/50Hz		
system		1 work place		power		block		year	month	day
usual functions		1 or 2 pumps KB20 (120V-220V/1ph)		options		or 1 pump KB40 (240V /3ph)		06	03	15
concept		PP	PP	PP	DL	app		006-0537		
draw		PP		DL		PAGE		4 de 4		

SIPROMAC
St-Germain de Grantham
QUEBEC, CANADA

NOTE 6

1) 120V/1Ph. 60Hz (csa) Direct Connection (N)


2) 240V/1Ph. 50Hz (europa) Dummy Fuse Midget (N)




250




300

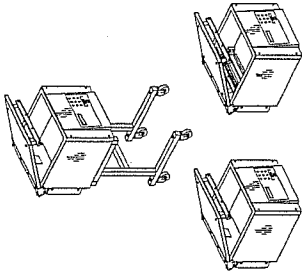


350/350D

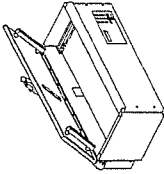


380A

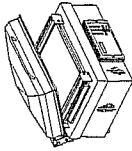


450T

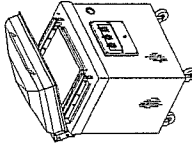


400A

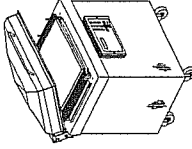


450A

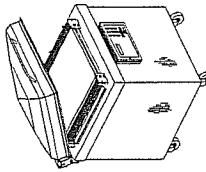

550A

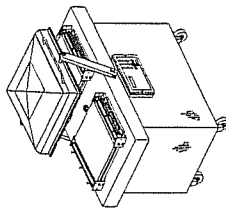


420A

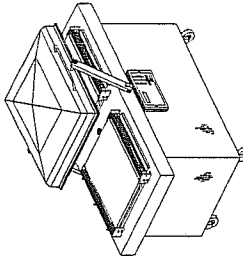


600A


VACUUM PACKAGING MACHINES

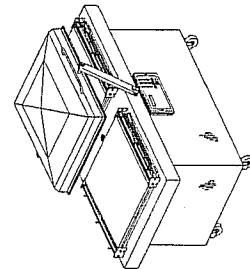


620A

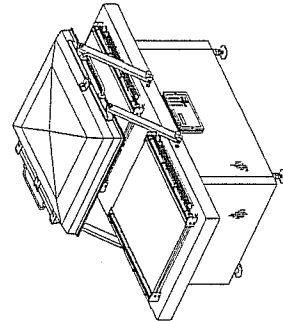


650A

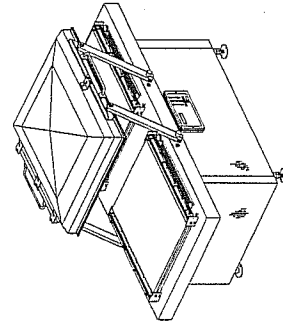

680A

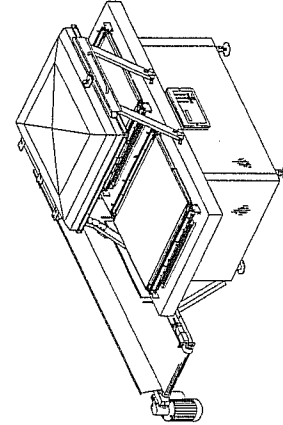

700A

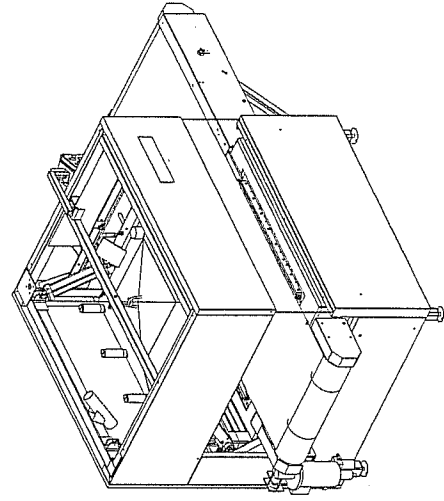

750A